



MAXxFly Bass



For More Information, visit PARKERGUITARS.COM

Parker MaxxFly Bass Controls

1. Front P-style P/U Volume
2. Magnetic Humbucker Volume
3. Bridge Piezo P/U Volume
4. Stacked Bass Boost Cut (bottom) Treble Boost (top)

Output

- ¼" Output, Mag/Piezo smart jack. Mono cable will sum both signals to mono- stereo Y cable will split Mag/piezo signals.
- 2 9v Batteries required for operation (18v)

ADJUSTING PICK-UP HEIGHT

Each pickup can be adjusted via the Pick-up Mounting screws located on the upper and lower side of the pickup.



SETUP

.String Height Measured at 12th fret: 2mm on treble side, 2.5mm on bass side.


D'addario .045-.105 gauge strings.

CLEANING

Fly models and select Maxx Fly feature hardened stainless steel frets bonded to a glass and carbon fiber fretboard. It is important to keep this fretboard clean. Not doing so can result in corrosion and fret instability. Use warm water on a soft cloth, and make sure to remove any dirt and sweat that may have built up around the frets. DO NOT use oils, waxes, or solvents on this type of fretboard, as it will result in the frets coming loose.

If you're just trying to remove fingerprints or dust from the guitar, use a soft guitar polishing cloth. To remove fine scratches or clean away heavy dirt, use a non-abrasive guitar polish and follow their provided instructions. Only use products designed for guitars, as other polishes may contain abrasives that will scratch or corrode the fretboard.

BRIDGE ADJUSTMENT

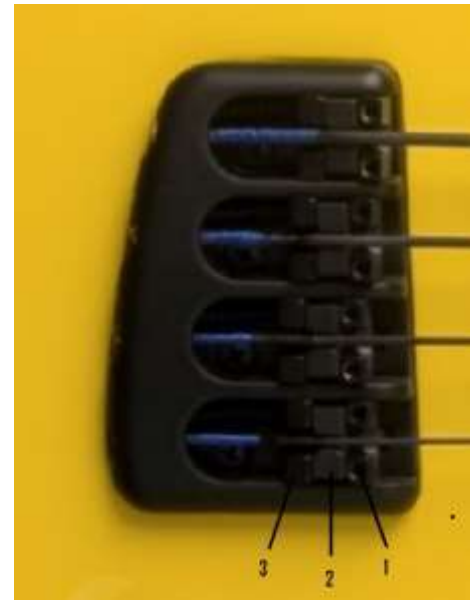

1. Height Adjustment Screws
2. Individual String Piezo P/U
3. Width Adjustment Screw - Adjusts string alignment